

T I060-90SS CHIMNEY HOOD INSTRUCTION MAUAL

EN

IT

ES

FR

DE



English

Warnings!  Installation  Instructions 

Italiano

Avvertenze!  Montaggio  Istruzioni 

Español

Advertencias!  Instalación  Instrucciones 

Français

Avertissements!  Montage  Instructions 

Deutsch

Warnungen!  Montage  Anleitung 

INDICAZIONI DI MONTAGGIO RACCORDO T NELLE CAPPE KA NT@AIR
 INSTRUCTION FOR FIXING THE T-JOINT FOR RECIRCULATION VERSION OF "KA"
 MONTAGEANLEITUNG FÜR DIE BEFESTIGUNG DER SCHACHTES UND DES T-STÜCKS(WIRD NUR BEI UMLUFT
 BENÖTIGT) DER "KA" MODELLE

A- POSIZIONARE LA RIDUZIONE ALL' USCITA DEL MOTORE
 A- TO PLACE THE SPIGOT ON THE OUTLET OF THE MOTOR
 A- REDUZIERSTÜCK AUF DEN MOTORANSCHLUB SETZEN

B- INSERIRE IL RACCORDO T SULLA RIDUZIONE E FISSARE IL TUTTO CON LA VITE DEL COPERCHIO BOX
 COME INDICATO
 B- TU PUT IN THE T-JOINT ON THE SPIGOT AND TO TIX IT WITH THE SCREWS TO THE MOTOR BOX AS THE
 PICTURE
 B- DAS T-STÜCK AUF DAS REDUZIERSTÜCK AUFSETZEN UND MIT DEN SCHRAUBEN AM MOTERGEHAUSE

C- INSERIRE NELLA PIEGA INTERNA BASSA DEL TUBO 2 DADI IN GABBIA M4
 C- TO INSERT IN THE INTERNAL WING OF LOWER TUBE No.2 M4 NUTS
 C- STECHEN SIE DIE BEIDEN MUTTERN No.2 M4 IN DIE INNEN-ABKANTUNGEN DES SCHACHTES

D- POSIZIONARE IL TUBO SOPRA LA CAPP
 D- TO PLACE THE CHIMNEY TUBE ABOVE THE HOOD
 D- RICHTEN SIE DEN SCHACHT ÜBER DER HAUBE AUS

E- FISSARE IL TUBO CON 2 VITI M4
 E- TO FIX THE CHIMNEY TUBE WITH No.2 M4 SCREWS
 E- DEN SCHACHT VON UNTEN DURCH DIE HAUBE MIT
 DEN BEIDEN SCHRAUBEN No.2 M4 FIXIEREN

C-N°2 DADI IN GABBIA M4 DA INSER.NEL TUBO
 C-No-2 M4 NUTS TO INSERT IN THE CHIMEY TUBE
 C-No-2 M4 MUTTERN ZUM BEFESTIGEN DES SCHACHTES


B-RACCORDO T
 B-T-JOINT CONNECTOR
 B-T STÜCK (WIRD NUR BEI UMLUFT BENÖTIGT)

A-RIDUZIONE MOTORE 150/120
 A-MOTOR SPIGOT 150/120
 A-REDUZIERSTÜCK 150/120

BOX MOTORE
 MOTOR BOX
 MOTORKASTEN

E-N°2 VITI M4 FIX TUBO

E-No.2 M4 SCHRAUBEN ZUM BEFESTIGEN DES SCHACHTES

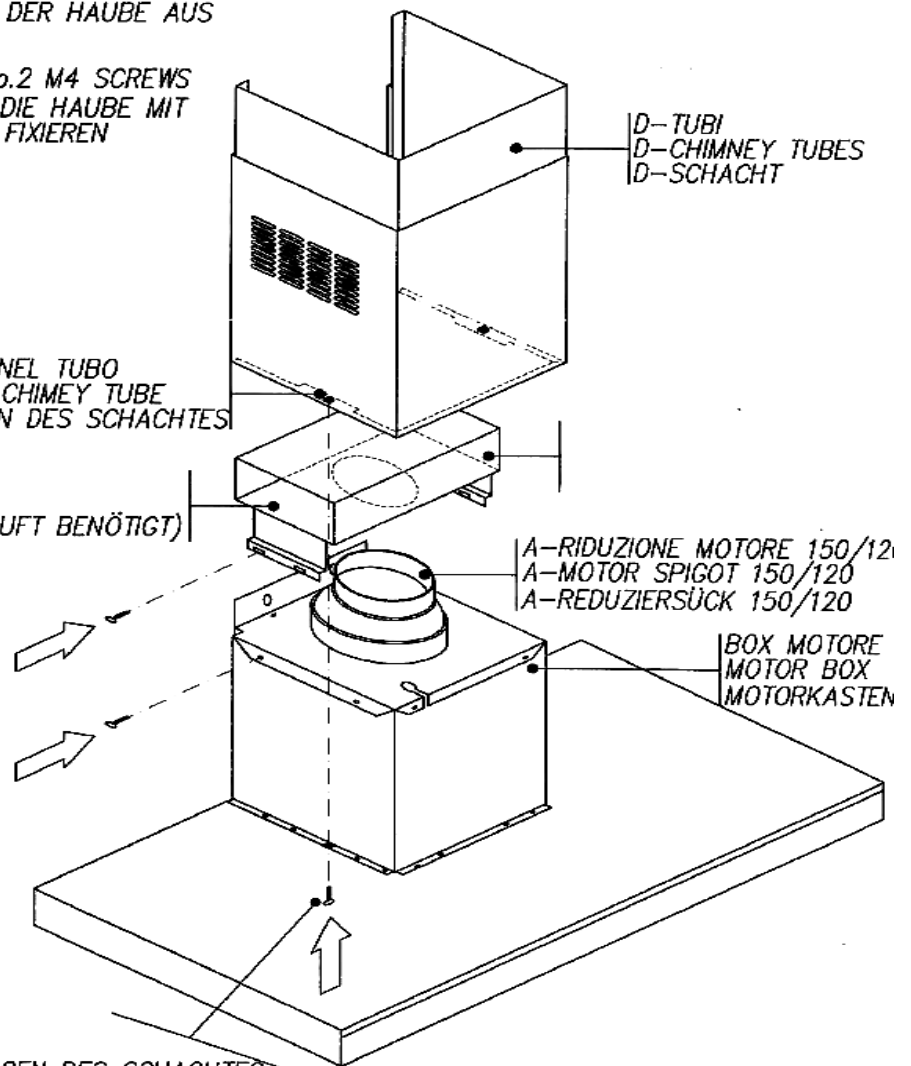

3011000008400

Safety

The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. This equipment can be used by children aged 8 or more, people with physical, mental and sensory disabilities or inexperienced users if they were instructed under proper supervision or trained on the safe use of the equipment and if they are fully aware of the related risks. Children shall not play with the equipment. The cleaning and **maintenance** are at user's expense and shall not be performed by unsupervised children.

- As soon as the equipment is delivered, remove the package immediately. Verify its overall aspect and, should any type of anomaly be found, notify it immediately to the sales point or the installer.
- Its equipment is intended for domestic use. **It shall not be employed for industrial or professional purposes** nor for any other purpose than that for which it has been designed.
- The supplier will not provide any warranty for the consequences and damages caused by an improper installation or a misuse of the equipment.
- Do not attempt to modify the characteristics of this equipment, that would represent a hazard. Repairs shall be exclusively made by a specialized and **authorized** technician. To avoid risks, the manipulation of the equipment is strictly forbidden so is the replacement of the power cable.
- **When the range hood is located above a gas appliance, this distance shall be at least 65 cm. If the instructions for installation for the gas hob specify a greater distance, this has to be taken into account.**
- Once the equipment has been installed, the disconnection of the equipment from the power supply shall be allowed. Disconnection can be done by keeping the jack accessible or adding a switch to the electric system in accordance with the installation rules.

WARNINGS

- If the power cord is damaged, it shall be replaced either by the producer, its customer service or qualified personnel in order to avoid risks.
- It is of vital importance to place particular attention as to where the wall or ceiling will be perforated so as to verify the presence of hidden electrical cables, pipes or iron beams, etc. This may cause serious breakdowns, electrical derivations or the transmission of noises and vibrations.
- **IMPORTANT: During the installation phase, before electrically connecting the equipment, always disconnect the power panel that will supply it (differential or thermal-magnetic of the general house switchboard).**
- **WARNINGS: Always disconnect the exhaust hood from the electrical outlet before proceeding to cleaning and maintenance operations by plugging off the electrical outlet, differential or thermal-magnetic of the general home switchboard. To clean the exhaust hood, never use steam or high-pressure devices (rules regarding electric safety).**
- It is forbidden to cook directly on the flame or operate the gas stoves with no container to cook on the same flame (aspirated flames may damage the equipment and the warranty will be cancelled accordingly). The use of the equipment on a fuel stove is not authorized (wood, coal,...).
- Frying under the equipment shall be constantly monitored since oils and fats being subjected to high temperatures may ignite. Do not flame under the exhaust hood.
- **CAUTION:** accessible parts may become hot when used with cooking appliances.
- Follow the cleaning frequency and filter substitution. The accrual of fat deposits may provoke fires. Never use the exhaust hood without the anti-fat filter.
- The equipment shall abide by the existing rules on the ventilation of closed spaces. Technically, the air expelled shall not pass through the duct used for the discharge of smokes from appliances using gas or any other fuel (central heating systems, etc...).
- Ventilate the environment appropriately in case of a simultaneous operation of the exhaust hood and any other equipment supplied by an

energy source other than electricity so that the exhaust hood will not draw gas compounds.

- **Attention!** There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).
- It is necessary to maintain a depressurized environment of maximum 4 Pa (0.04 mbar). Such conditions allow an excellent working of the exhaust hood. In order to achieve such environment **a permanent air intake is necessary** in order to avoid air stagnation (it is advised to use a **ventilation grid** for this purpose). Windows or doors shall not be used.
- The electrical supply of the power network shall be stable and cope with the indicated electrical standards, see rating label. Should it be not stable and receive voltage variations in the supply, intensity or frequency such as armonici, transistor, voltage dips, overloads, electrical storms, etc..., the hood may show malfunctions or even breakdowns, and the repair would not be covered by the warranty. In that case, the exhaust hood shall be disconnected and the company must contact an electrician or electrical company in order to solve the supply problem.
- The hood is a household appliance act to extract smoke , it can not be used as support element of objects or utensils.
- In the constant effort to to improve our products, we reserve the right to make changes following their enhancement to their technical, functional and aesthetic characteristics.

Declaration of Conformity CE

This appliance is in compliance with the following European Directives:

Directive EMC 2014/30/EU

Directive LVD 2014/35/EU

Directive ROHS 2011/65/EU

Delegated Regulation (UE) nr. 65/2014

Electrical Connection

- Before connecting the appliance to the electricity supply, check that the voltage corresponds to that on the data plate and that the power supply cable is suitable for the appliance load also stated on the data plate.
 - If the appliance is connected directly to the mains, fit an all-pole disconnect switch with minimum contact gap of 3 mm, adequate for the appliance load and complying to regulations.
 - The plug used must support the power of work of the appliance.
- **Do not use reducers, adapters or switches for connection to the mains, since these could overheat and cause burns**
- **Earth connection is required by law**

If the power cable must be replaced, use a cable having identical characteristics to the original supplied by the manufacturer, suitable for the load and temperature. This is available from After-sales service.

Important!

The entire installation process is exclusively reserved for qualified workers, installers or authorized technical service.

Before proceeding with the installation, make sure that all components are in perfect conditions. Otherwise, contact the vendor and do not proceed with the installation.

Once installed, the likely imperfections of the equipment such as scratches, impacts, etc..., will not be covered by under warranty.

Maintenance

- Use only a damp doth with neutral liquid detergent.
- Do not use wet sponges or cloths, water jets, thinners, solvents, hydrochloric acid, bleach, alcohol or abrasive substances.
- Unplug the appliance or switch off the circuit breaker before carrying out maintenance operations.

Scrapping






The symbol on the product or on the accompanying paperwork indicates that the appliance should not be treated as domestic waste, but should be delivered to a suitable electric and electronic appliance recycling collection point.

Follow local guidelines when disposing of waste. For more information on the treatment, re-use and recycling of this product, please contact your local authority, domestic waste collection service or the shop where the appliance was purchased.

PLEASE NOTE

**DO NOT REMOVE THE PROTECTIVE PLASTIC SHEET FROM THE HOOD UNTIL
THE INSTALLATION IS NOT COMPLETELY FINALIZED**

Procedure for fixing

- I. Dimensional drawing 
- II.  Draw the points highlighted on the wall and drill the 6 holes indicated:
 - A-A' : Holes for the engine box support
 - B-B' : Holes for the tube support
 - C-C' : Holes for safety fixing
- III. Fix the hood in A-A' ; tighten the hose to the bracket B-B' ; remove both filters for definitive fixing in C-C' 

Connecting and fitting

Before connecting the appliance, check the household installation.

Appliance with prefitted power cable: The power cable must only be replaced by a trained after-sales engineer.

Installing: Do not trap the power cable and do not route it over sharp edges. If the oven is a built-under type, route the cable on the rear corners of the oven to the socket.

Electrical Connection









Connect the device to the mains and check the operation .

- voltage , see the rating plate .
- Connect adhering strictly to the relevant diagram.
 1. Brown
 2. Blue
 3. Yellow and green

Mechanical Push Button



	Intake warning
	Aspiration off push button
	Aspiration 1° speed push button
	Aspiration 2° speed push button
	Aspiration 3° speed push button
	Light push button

Maintenance

- Use only a damp doth with neutral liquid detergent.
- Do not use wet sponges or cloths, water jets, thinners, solvents, hydrochloric acid, bleach, alcohol or abrasive substances.
- Unplug the appliance or switch off the circuit breaker before carrying out maintenance operations.

Halogen Lamps Replacement



- Disconnect the hood from the mains and wait a few minutes for the lamp to cool.
- Follow the instructions in the related design, using gloves.



Filters Replacement

- **A. ACTIVATED CARBON FILTERS (Only filtering types):**
 - The filter assembly can not be regenerated and must be replaced at least every two months.
- **B. METALLIC ANTI-GREASE FILTERS:**
 - The filters must be washed at least one a month with hot water and detergent.
 - It can also be washed in the dishwasher.
 - Open by means of the handle.

Tips for Energy Saving

- Always use the cover corresponding to each pot. When cooking without a lid, the energy consumption is somewhat greater.
- Use a glass lid to see inside without having to lift it.
- Use containers flatbed. If the base is not flat, the energy consumption is greater.
- For small amounts, use small pans. A large bowl and filled just needs a lot of energy.
- For cooking, use a little water. Thus, it saves energy and preserves all the vitamins and minerals in vegetables.

